

# USBINT2

## USB Analogue Systems Panel Interface



The analogue systems panel interface (USBINT2) is a universal serial bus converter that provides conversions from RS232 to USB, TTL to USB or TTL to RS232.

These options provide the connectivity required between a PC and intelligent addressable control panels, wireless control panels, and wireless survey tools.

### Features

- Intelligent addressable control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC wireless live monitor connection using the TTL to USB/RS232 configurations
- Wireless survey tool to PC survey tool connection using the TTL to USB/RS232 configurations

### Benefits

- Simple PC driver installation
- Simple DIP switch configuration

## Configuration Settings

Switch Positions				Mode	Usage
4	3	2	1	TTL to USB	<ul style="list-style-type: none"> <li>• Wireless Panel to PC Live Monitor</li> <li>• Wireless Survey Tool to PC Survey Tool</li> </ul>
ON	ON	OFF	OFF	TTL to RS232	<ul style="list-style-type: none"> <li>• Wireless Panel to PC Live Monitor (no USB available)</li> <li>• Wireless Survey Tool to PC Survey Tool (no USB available)</li> </ul>
OFF	OFF	ON	ON	RS232 TO USB	<ul style="list-style-type: none"> <li>• Intelligent Addressable Panel to PC Site Installer</li> <li>• Wireless Panel to PC Site Installer</li> </ul>

## Cable Connections



TTL to USB -

Wireless survey tool connection



TTL to RS232 -

Wireless survey tool connection (serial link)



RS232 to USB -

Wireless panel to PC (site installer)

## Kit Contents

1 x USBINT2

1 x Driver CDROM

1 x USB Cable

1 x RS232 Cross-Over Cable

1 x TTL Cable

## Catalogue numbers

Description	Code
USB Analogue Systems Panel Interface	USBINT2